DAVAR partners international
the sound of life

the Audibible™

...designed, that they might hear the Word of God, spoken...

user manual

Version 1.3 I May 2011

www.davarpartners.com

TURNING THE Audibible™ ON/OFF:

The on/off button is at the bottom left of the player.

To turn the player on, press the on/off button until the green LED lights. The red LED will also light briefly while the unit does a diagnostic test and the content is validated. If the RED led remains lit then either the SD card cannot be read, or it contains content that is invalid or that has been tampered with.

To turn the player off, press the on/off button until the green LED is unlit. Alternatively, if the player is left in the paused state for 3 minutes, it will turn itself off automatically.

PLAY/PAUSE

To begin play, press either the **|>** or the **on/off** button temporarily. The green LED will flash to indicate that content is being played.

To pause, press either the **|>** or the on/off button again. The green LED will light continuously in the paused state.

Playback can also be started or re-started by pressing any of the navigation buttons.

NAVIGATION

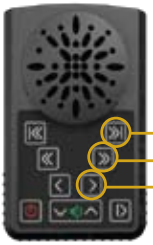

The Audibible™ navigation is designed on a three tier structure:

- Press the **|<<** and **>>|** buttons to navigate forward or back in the top or Title tier of audio content.
- Press the **<<** and **>>** buttons to navigate forward or back in the middle or Book tier of audio content.

- Press the **<** and **>** buttons to navigate forward or back within the lowest or Chapter tier.

To perform a fast forward/ seek function hold down on the **>** button to increase the playback speed. The playback speed will automatically revert to normal speed if the end of the chapter is reached.

The player will automatically advance to the next chapter, book, or title when it gets to the end of a chapter. The player will also automatically wrap around from the last chapter or section back to the first.

Press the **|<<** button to navigate in the top tier of the audio content to revert back to the start.

SOUND VOLUME CONTROL

The sound volume control is centered at the bottom of the unit.

Press the **V** to decrease and **Λ** button to increase the volume. When the Audibible™ player is turned on, the volume level will revert to the same level as when it was turned off.

USER PREFERENCES

- The navigation position and the sound volume level are saved when the player is turned off.
- When the player is turned on again, the navigation position will revert to the beginning of the chapter that the player was at when preferences were last saved. Similarly the sound volume level will revert to the saved level.

BATTERY STATUS

The unit will play for approximately 5 to 10 hours from a full charge depending

on the volume setting. The red LED will begin to flash when the battery level drops below 5% charge remaining.

BATTERY MANAGEMENT

The battery comes fully charged by the factory. For best results please make sure to charge it fully on a regular basis before or when using the player in the field.

CHARGING USING THE SOLAR PANEL

When the battery is fully depleted, the player can be fully charged by direct, full sunlight conditions in 4 to 5.5 hours (typical).

CHARGING USING THE EXTERNAL DC PLUG

When the battery is fully depleted, the player can be fully charged within 2.5 hours (typical) using a 5-28VDC power adaptor that has a 3.5mm barrel plug connector. (Centre pin= Positive). The charger must be able to supply a current of at least 140mA. The adaptor jack is situated on the lower right side of the Audibible™ player. When plugged into an external charger, a blue LED will light which indicates charging. The blue LED will turn off once the battery is fully charged.

AUDIO PHONE JACK, EXTERNAL SPEAKER/S, OR PUBLIC ADDRESS SYSTEM

Stereo earphones, external speaker/s, or PA can be connected to the standard 3.5mm phone jack located on the right side of the Audibible™ player.

CONTENT

Content management utilizes proprietary software which should be used by authorized persons only. For further information please go to www.davarpartners.com to view "Audibible™ Software Guide"

CARE AND MAINTENANCE

The Audibible™ player was designed to give years of normal use in all types of harsh environments. It is moisture and dust resistant but not completely waterproof. It is designed to withstand heat and cold but it is best to operate between -20°C (-4°F) and 60°C (140°F).

Do not place the Audibible™ player near an open flame. When water has been spilled on the speaker, or sand blown into the speaker cavity, ensure to remove it, and to dry out before switching the unit on again. If the Micro SD card has been removed, please ensure to replace it with the side containing 8 copper strips facing upwards.

TROUBLE SHOOTING

- If the Audibible™ does not turn on please see TURNING THE Audibible™ ON/OFF in the instructions.
- If the RED or GREEN LED does not light, please ensure that the Audibible™ player battery is charged according to the charging instructions.
- If the Audibible™ does not switch off and the GREEN and RED LED stays lit, please ensure that the Micro SD card contains a valid Base Content File. The only way to switch off the Audibible™ when it is in this state is to remove the Micro SD card and then to press the power button for at least two seconds

WARRANTY

The Audibible™ is covered by a one year limited warranty. For terms and conditions please see the warranty card which accompanied the player or visit our website at www.davarpartners.com

DAVAR PARTNERS INTERNATIONAL
e info@davarpartners.com

DAVAR
the sound of life

partners
international

the Audibible™

is a solar-rechargeable audio player in a ruggedized package about the size of a cell-phone, capable of holding hundreds of hours of high quality audio content.

Approximately 60% of the world's population do not read and many of these live in remote locations without electricity and under harsh conditions.